
Elastic Pocket Batten Install Guide

MC Scow · X Boat Main



Step 1

All battens are labelled with "luff" and an arrow designating the luff/front end of the batten. Batten orientation should look like this.

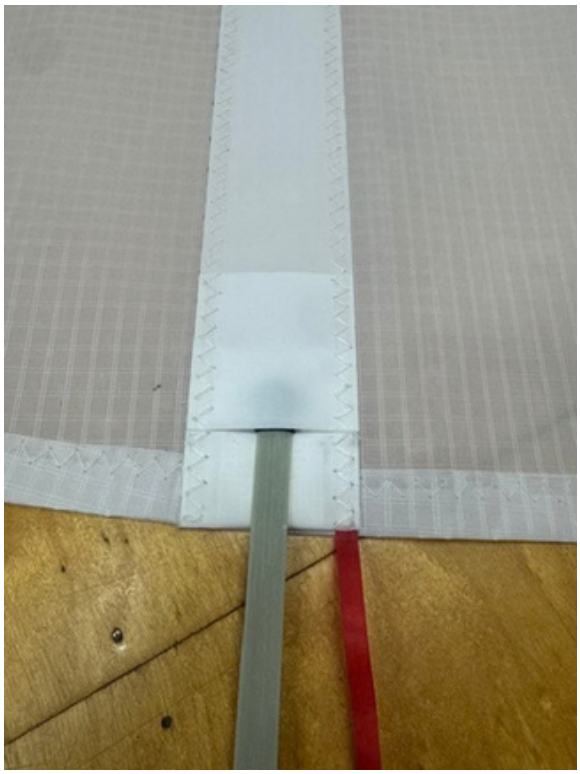


Step 2

Insert the luff end of the batten into the batten pocket as shown.

Elastic Pocket Batten Install Guide

MC Scow · X Boat Main

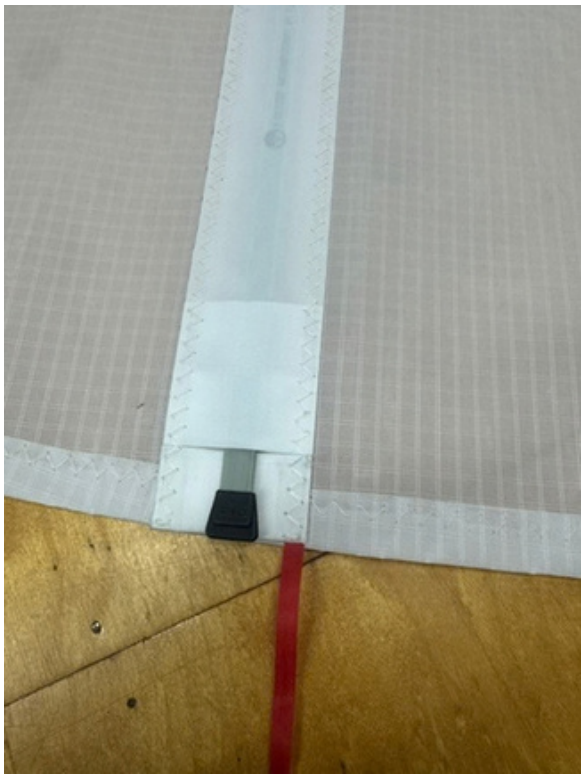

Step 3

Push the batten entirely into the pocket. The leech end of the batten will still be showing.

Scan or click link to watch video

Video Link

Step 4

In order to finish loading the batten into the pocket, use the technique shown in this video. Once finished, the batten is set.

Step 5

Repeat for all battens.